

TECHNICAL DATA SHEET


F - 200 - 05 DRYWALL FRAME INSTALATION

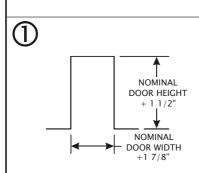


ADD TO DOOR OPENING DIMENSIONS: 1 7/8" TO WIDTH AND 1 1/2" TO HEIGHT. FOR A 3068 DOOR FRAME, THE ROUGH OPENING IS 37 7/8" X 81 1/2".

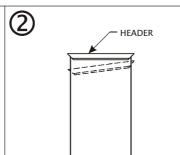


INSTALL HEADER INTO POSITION APPROX. 1" FROM TOP AND IN THE CENTER OF THE ROUGH OPENING.

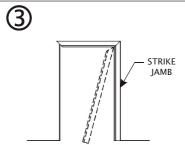


INSTALL STRIKE JAMB BY SLIDING OVER WALL AT TOP AND ENGAGING CORNER REINFORCING INTO HEADER. PIVOT JAMB INTO PLACE.

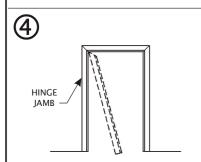


REPEAT STEP #3 WITH HINGE JAMB. PULL HEADER DOWN TIGHTLY ONTO JAMBS. LOCK HEADER AND JAMB TOGETHER BY BENDING OVER EXPOSED TABS.

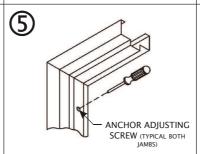


TURN ADJUSTING SCREWS IN BOTH JAMBS COUNTERCLOCKWISE UNTIL ANCHOR IS RESTING AGAINST THE WALL.

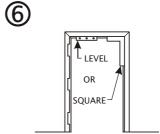

IF FEASIBLE, HANG DOOR NOW AND ADJUST FRAME ON WALL TO ALLOW PROPER DOOR/FRAME CLEARANCES OR PLUMB FRAME WITH CARPENTER SQUARE AND/OR LEVEL. (ADJUST HEADER LEVELNESS BY SHIMMING UNDER JAMBS.)

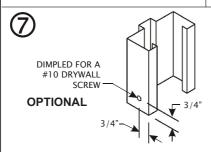

CHECK DOOR OPENING DIMENSION AT BASE OF FRAME (SAME DIMENSION AS BETWEEN JAMBS AT HEADER.) SECURE JAMBS WITH DRYWALL SCREW (NOT FURNISHED) THROUGH PUNCHED HOLE AT BASE OF FRAME. BE SURE TO ATTACH SCREWS ON EACH SIDE OF JAMBS (4 PLACES.)

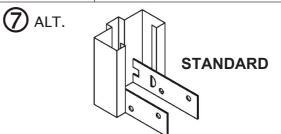

CHECK DOOR OPENING DIMENSION AT BASE OF FRAME (SAME DIMENSION AS BETWEEN JAMBS AT HEADER.) SECURE JAMBS WITH DRYWALL SCREWS (NOT FURNISHED) THROUGH SILL ANCHOR. (NOTE: SPECIFY ON YOUR ORDER IF THIS METHOD OF ATTACHMENT IS REQUIRED.)

Issue Date: January 2006

REVISED: 02/01/2009

